



# Disassembling General Electric Bagel Switch 4-Slice Toaster Outer Case

Replace the outer case of your General Electric Bagel Switch 4-Slice Toaster.

Written By: Ron Gajdos



## INTRODUCTION

This guide will explain how to remove the outer case of the General Electric Bagel Switch 4-Slice Toaster.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Disassembling General Electric Bagel Switch 4-Slice Toaster Outer Case



⚠ Unplug the toaster.

## Step 2




- Remove the two levers and four dials by pulling them out directly towards you.

- ⓘ Removing these components may require some force, but they will release.



## Step 3

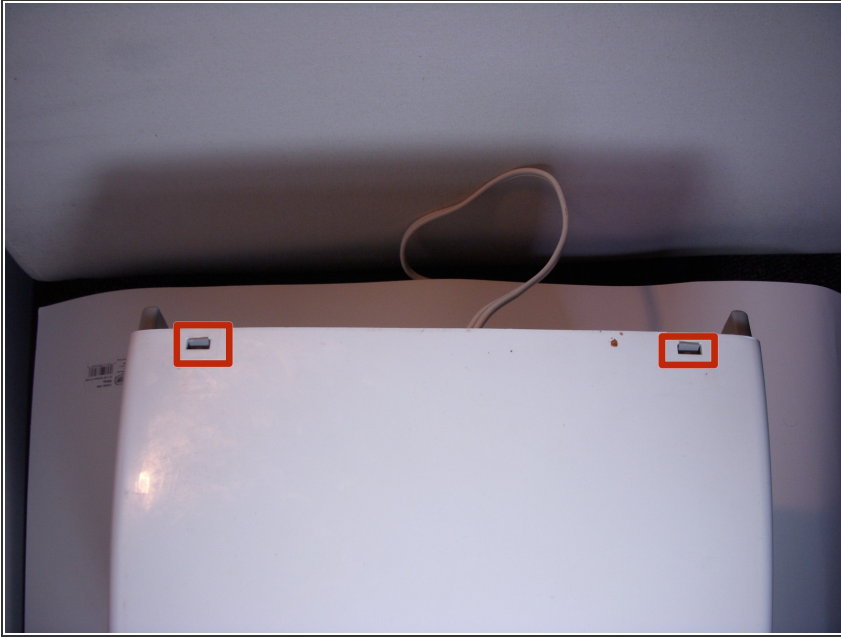

- Carefully remove the top part of the toaster casing.
- Disconnect the small plastic clips on the back of the toaster.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-11 02:10:43 PM.